




1880261 K-Metal Red Locker Trolley
1880274 K-Metal White Locker Trolley
1880371 K-Metal Pink Locker Trolley

Parts and Hardware List


A.	Front Assembly	1 pc
B.	Back Assembly	1 pc
C.	Left & Right Side Panels	2 pcs
D.	Bottom Panel	1 pc
E.	Casters	4 pcs
F.	Allen Head Bolts	10 pcs
G.	Phillips Head Bolts	4 pcs
H.	Allen Head Wrench	1 pc
I.	Phillips Head Screwdriver	1 pc
J.	Spanner	1 pc
K.	Optional Allen Head Screwdriver Bit	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.
- * This item is to be assembled by an adult and is not intended to be taken apart by a child.

Hardware Illustrations

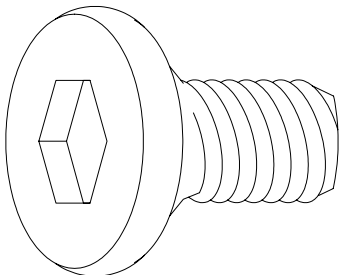

F. Allen Head Bolt

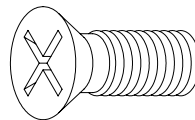

G. Phillips Head Bolt



1880261 K-Metal Red Locker Trolley
1880274 K-Metal White Locker Trolley
1880371 K-Metal Pink Locker Trolley

Attach Front & Back Assemblies, Left & Right Side Panels

Parts required

A.	Front Assembly	1 pc	C.	Left & Right Side Panels	2 pcs
B.	Back Assembly	1 pc	D.	Bottom Panel	1 pc

1. **Attach Front Assembly (A)** Place the Bottom Panel (D) on a soft surface. Insert the lower metal plates of Front Assembly (A) into gaps under the end of Bottom Panel (D). Then insert the stocks of Front Panel (A) into the upper & lower tubes of Left & Right Side Panels (A, B). **Note: Upper tube with two holes should be inside, lower tube with three holes should be outside.** See illustration #1.
2. **Repeat above step to attach Back Assembly (B)** Make sure all pre-threaded holes in the stocks of Front & Back Assemblies (A, B) align with the pre-drilled holes in the tubes of Left & Right Side Panels (C) and pre-drilled holes in the Bottom Panel (D). See illustration #1.

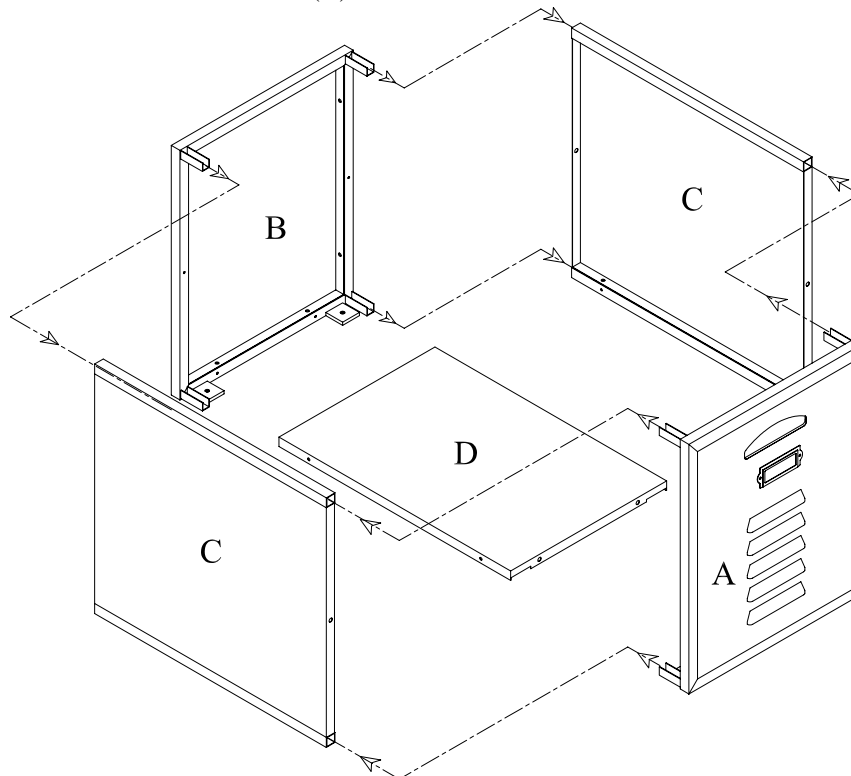


Illustration #1



1880261 K-Metal Red Locker Trolley
1880274 K-Metal White Locker Trolley
1880371 K-Metal Pink Locker Trolley

Attach Casters

Parts required

A.	Front Assembly	1 pc	G.	Phillips Head Bolts	4 pcs
B.	Back Assembly	1 pc	H.	Allen Head Wrench	1 pc
C.	Left & Right Side Panels	2 pcs	I.	Phillips Head Screwdriver	1 pc
D.	Bottom Panel	1 pc	J.	Spanner	1 pc
E.	Casters	4 pcs	K.	Allen Head Screwdriver Bit	1 pc
F.	Allen Head Bolts	10 pcs			

1. **Put the assembled Locker upside down on a soft surface** Secure the ends of Bottom Panel (D) to Front & Back Assemblies (A, B) with Phillips Head Bolts (G) using Phillips Head Screwdriver (I). Secure the sides of Bottom Panel (D) to the Left & Right Side Panels (C) with Allen Head Bolts (F) using Allen Head Tool (H or K). See illustration #2.
2. **Attach Casters (E)** Align the exposed threads of Casters (E) with the pre-threaded holes in the metal plates of Front & Back Assemblies (A, B). Hand tighten by turning in a clockwise direction, then fully tighten using Spanner (J). See illustration #2.
3. **Put the assembled Locker assembly upright.** Secure the top tubes of Left & Right Side Panels (A, B) to the top stocks of Front & Back Panels (C) with Allen Head Bolts (F) using Allen Head Tool (H or K). Then secure the ends of Left & Right Side Panels (C) to the Front & Back Assemblies (A, B) with Phillips Head Bolts (G) using Phillips Head Screwdriver (I). See illustration #2.

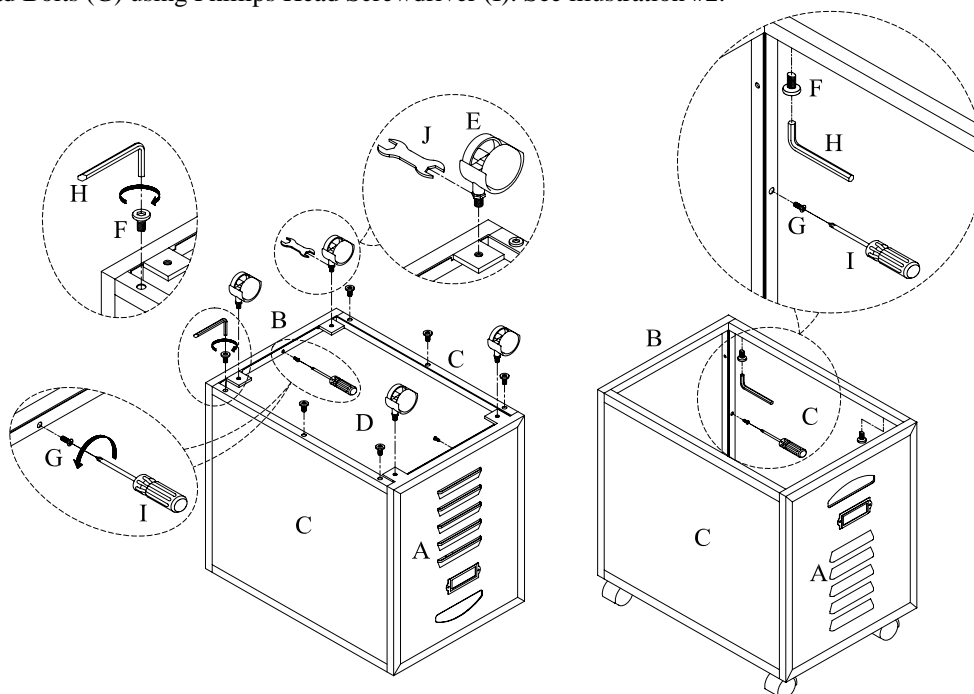


Illustration #2